

RINGRI WIFI

FORMATTER CARDS GUIDE

The WIFI formatter card is based on basic cards, basic functions are same with the basic cards. If you do not need the wireless network function, you can use it directly without any additional settings.

NOTE: Please use basic version driver for WiFi cards. WiFi printer Driver NOT supported.

Wireless network function setting step :

A. Install WIFI card correctly [^{*1}] and connect power and start the printer.

B. After the printer is powered on and the preheating is completed, the printer starts and stay standby state [^{*2}]. At this time, keep opening the printer toner cartridge cover more than 10 seconds (or keep pressing the "WiFi REST" button on card over 5 seconds).

BLUE light Start flashing, the printer will enter the wireless network reset state [^{*3}].

C. Use a device that can connect to the wireless network (such as smart-phones, laptop computers, etc) search for wireless WIFI , select and connect WIFI signal which from WIFI cards. [^{*4}]

D. After connect WiFi, use WEB-browser on the PC to enter “http://find.ringri.com” or IP address marked on cards . [^{*5}] After setting is successfully connected to the wireless WiFi network, the printer blue light will remain frequently lit, and at the same time, printer resetting-wifi close.

E. Finish setting and start enjoy WiFi printer.

*1. Manage WIFI settings , it can be operated by the printer to connect without USB connect to PC.

*2. If card first time installing, printer will directly enter the wireless network reset state and the blue indicator lights will flash. This state will last about 3 minutes. If there is no setting, it will close wireless network reset state after end. WiFi setting only available in printer standby state.

*3. Keep opening cover of the toner cartridge more than 10 seconds, printer will enter the wireless network reset state. This state will last about 3 minutes. If there is no setting, it will close wireless network reset state after end. If the printer has successfully connected WiFi before and without any new setting, it will automatically connect to WiFi that is correctly connected to the last correct connection.

*4. WIFI card only support 2.4G WIFI . Resetting WIFI SSID is “PRINTER-XXXXXX”.

*5. The printer must be on the same network segment as the PC side.

*6. Press 5 times “WiFi Rest” button quickly, lights on 3 sec, all network setting will be reset.

IOS、MAC OS AirPrint Guide

This series WIFI cards support AirPrint printing and scanning functions (needed scan-printer models).




Use AirPrint to print from your iPhone or iPad


Learn how to print from your iPhone or iPad to an AirPrint-enabled printer.

Before you begin

- Confirm that your printer supports AirPrint. Contact your printer's manufacturer for details.
- Make sure that your iPhone or iPad and your printer are connected to the same Wi-Fi network and that you're within range.

Print with AirPrint

1. Open the app that you want to print from.
2. To find the print option, tap the app's Share button  or  or the Actions button***.
3. Scroll down and tap the Print button  or Print. If you can't find the print option, check the app's User Guide or Help section. Not all apps support AirPrint.
4. Tap No Printer Selected and choose an [AirPrint-enabled printer](#).
5. Choose the number of copies or other options, like which pages you want to print.
6. Tap Print in the upper-right corner.

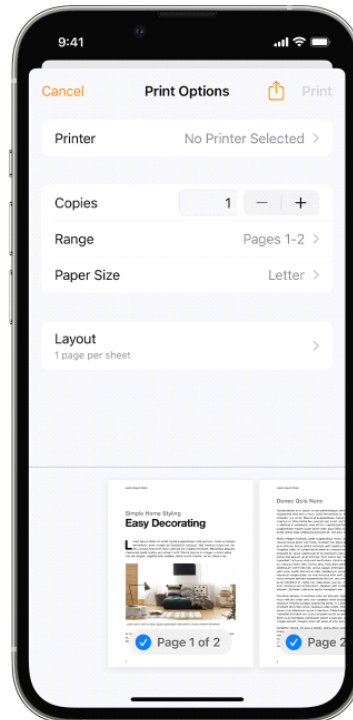

For more detailed operation processes, please refer to the Apple.com .

Android and Harmony OS Print Guide

This series WIFI cards support printing and scanning functions (needed scan-printer models).

Due to the many Android system brands, the setting of each brand will have different steps or logic.

A. HUAWEI Harmony OS



- a. Open the printer and connect the printer to the same network with the mobile phone.
- b. Choose pictures or PDF files to be printed on your mobile phone, click to share> Huawei sharing.
- c. Click the printer name, set the printing effect, and click to start printing.

Reference link:

https://consumer.huawei.com/content/dam/huawei-cbg-site/greate-china/cn/mkt/emui/tips/emui11-tips/image/video/10044641_f003_SharePrinter.mp4

B. OPPO Phone



WINDOWS WiFi Print Guide


This series WIFI cards support printing and scanning functions (needed scan-printer models)。

Please finish printer driver at first. It is recommended to use the official driver or RINGRI version.

Enter the control panel and add a printer that has been connected to the wireless network.




Collect "Adding printer".

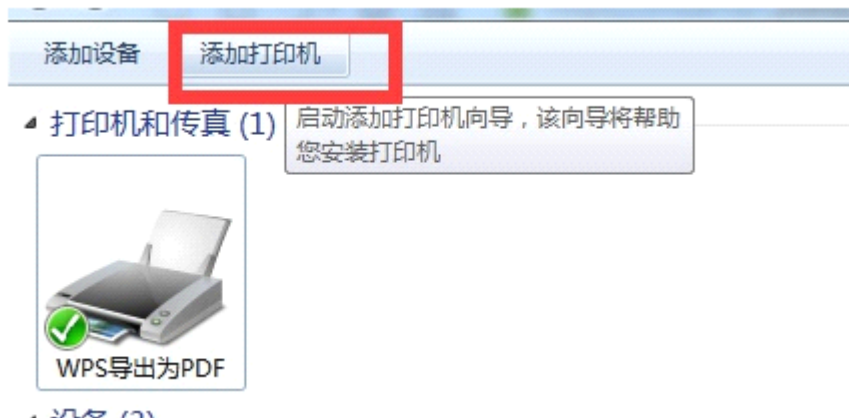

Collect “Adding printer from wifi/net/bluetooth”



Start Searching printer from net.

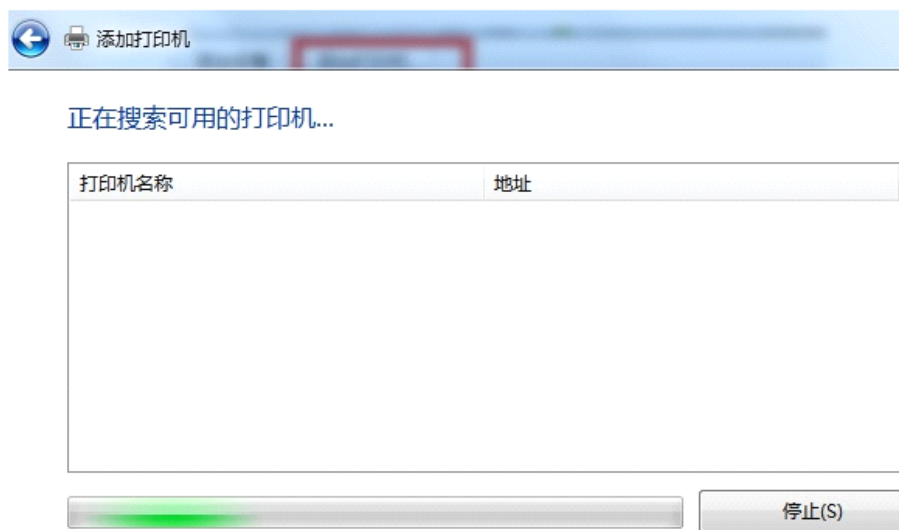


And collect printer which we are setting in list.

安装打印机驱动程序



从列表中选择打印机。单击 Windows Update 以查看更多型号。

若要从安装 CD 安装驱动程序，请单击“从磁盘安装”。

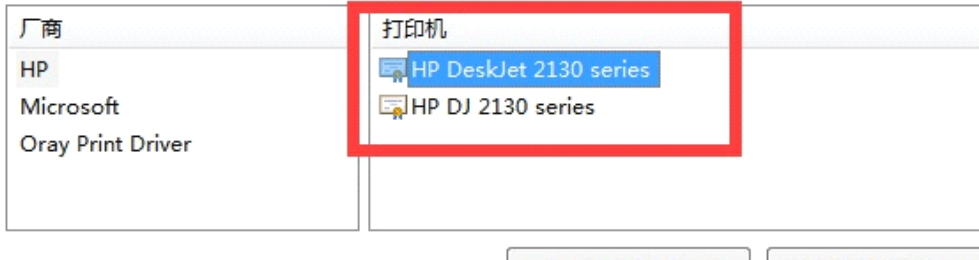

We do not need share printer from PC because WiFi printer is sharing .

打印机共享

如果要共享这台打印机，您必须提供共享名。您可以使用建议的名称或键入一个新名称。其他网络用户可以看见该共享名。

- 不共享这台打印机(O)
- 共享此打印机以便网络中的其他用户可以找到并使用它(S)

共享名称(H):

Finish setting.

